



General Electric Create Jason Wu Casing Disassembly

In order to access many of the camera's components, the plastic casing must be completely removed from both sides.

Written By: Kylan Hennessy



INTRODUCTION

This guide will show how to carefully remove the front and back plastic casing that surrounds the camera.



TOOLS:


- [Phillips #00 Precision Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Precision screwdriver kit \(Phillips bits\)](#) (1)



PARTS:

- [Magnetic Project Mat](#) (1)

Step 1 — General Electric Create Jason Wu Casing Disassembly

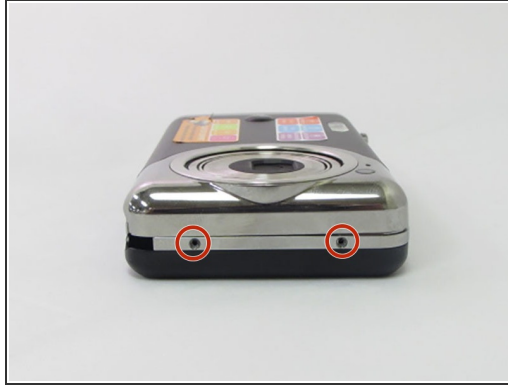

- Begin by removing the 5 screws (located: 2 screws on either side and 1 screw on the bottom) using the PH000 head in the Precision Phillips Screwdriver.
- ⓘ These screws were missing in our example. These screws should have been small Phillips PH000 screws 1.5mm in length.
- ⚠ These screws are very small. To keep from losing any pieces, place all small metals on a magnetic project mat.

Step 2



- After the screws are removed, pull the front casing up and away from the camera.
- ⓘ If the casing is difficult to remove, use a plastic opening tool to gently pry up on the front as shown.

Step 3



- Using your hands or an opening tool, pry off the silver frame, taking special care at the top of the camera where the buttons are as it is a little harder to pry off.
- ⓘ If the back casing is loose from the camera body, it may be easier to perform step 4 first, then accomplish this step. Proceed as your unit allows.

Step 4



- The last part of the casing to disconnect is the back that houses the LCD screen.
- The screen is attached by a connection ribbon. Gently pull the casing and screen away from the camera body to disconnect the casing.
- ⓘ The LCD screen is held onto the back casing by a small amount of adhesive. This may come loose during this process. Do not worry if they become separated.
- ⚠ This plug and the connection ribbon are fragile, try not to tear the connection ribbon when disconnecting.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 10:09:40 PM.